 
 




**1**  
**Modus wählen**  
 Choisir le mode  
 Selezionare la modalità

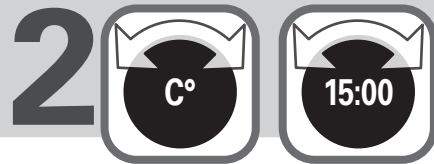

 
**2**  
**Timer/Temperatur anpassen**  
 Aadapter la minuterie/la température  
 Rregolare il timer/la temperatura

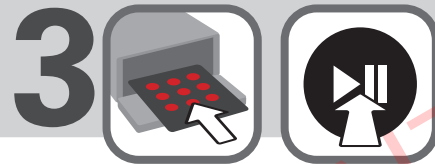

**3**  
**Backblech in den Ofen schieben und Ofen starten**  
 Introduire la plaque de cuisson dans le four et démarrer le four  
 Posizionare la teglia nel forno e accendere il forno.



**4**  
**Bei Bedarf: Timer nachjustieren**  
 Si nécessaire : réajuster la minuterie  
 Se necessario: regolare il timer

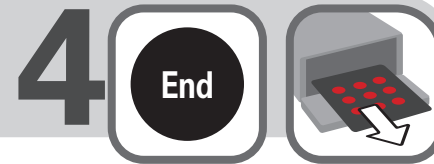

**4**  
**End**  
**Speise entnehmen**  
 Prélever un aliment  
 Rimuovere il cibo



**1**  
**Modus wählen**  
 Choisir le mode  
 Selezionare la modalità



**2**  
**Timer anpassen**  
 Aadapter la minuterie  
 Rregolare il timer



 
**3**  
**Pizzastein/Backblech in den Ofen schieben**  
 Mettre la pierre à pizza/la plaque de cuisson dans le four  
 Posizionare la pietra per pizza o la teglia nel forno



**4**  
**Ofen aufwärmen**  
 Echauffer le four  
 Riscaldare il forno



**4**  
**Nach Ablauf der Aufwärmzeit: Speise backen**  
 Après le temps de préchauffage: Cuire l'aliment  
 Al termine del tempo di riscaldamento: Cuocere l'alimento

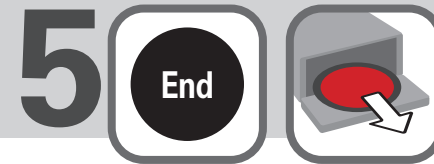

**5**  
**End**  
**Speise entnehmen**  
 Prélever un aliment  
 Rimuovere il cibo

Richtwerte:  
 Valeurs indicatives:  
 Valori standard:

**THICK MEAT**

**10min**

Für vorgekochtes Fleisch  
 Pour la viande pré-cuite  
 Per la carne precotta

**GRILL**



Rare  
 1:30min



Medium  
 2min



Medium well  
 2:30min



Well done  
 3:30min

**PIZZA**

**Thick Crispy**

Ø 20cm:

07:30

Ø 25cm:

08:00

Ø 30cm:

08:30

**Neapolitan**

04:00

04:50

05:50

**New York**

08:30

09:00

09:30