



M1

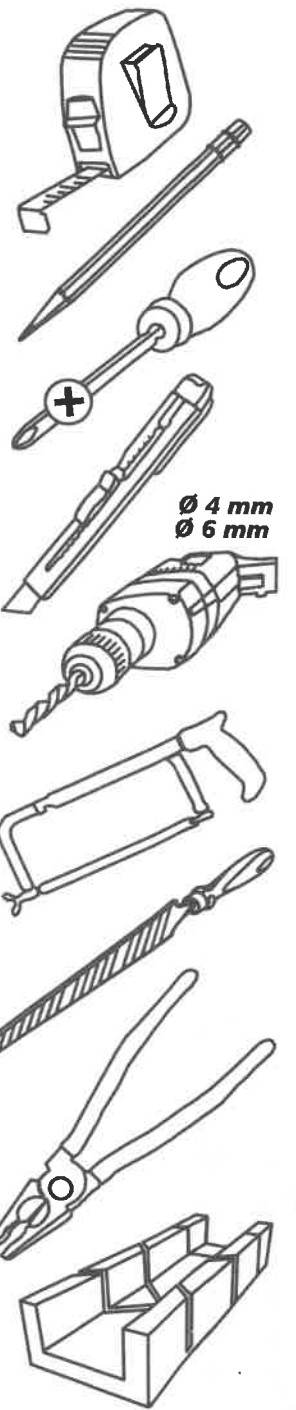


QA292-F-02

Montage:
Montaggio:
Monterig:
Felszerelés:
Montáž:


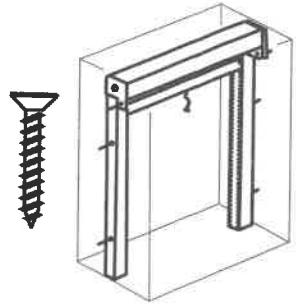


Ø 4 mm
Ø 6 mm


23001

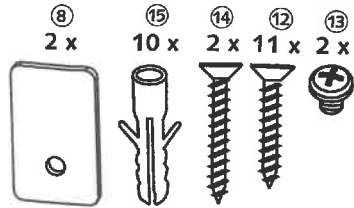



23002

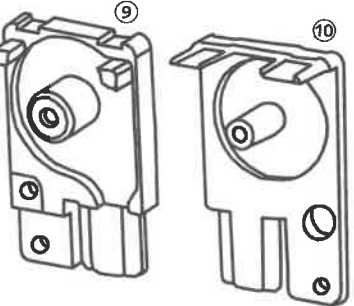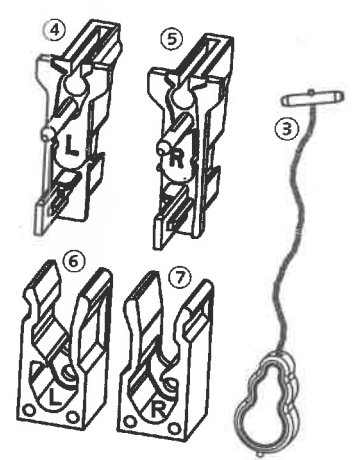


23003

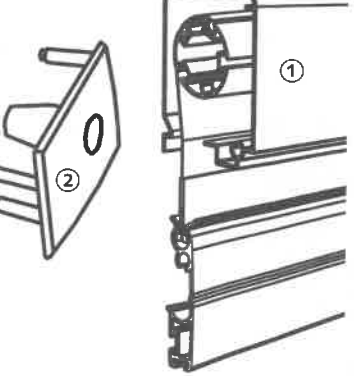


23004

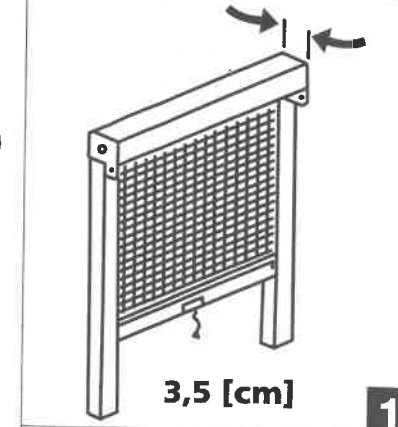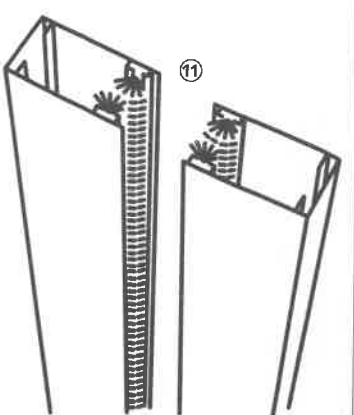


1

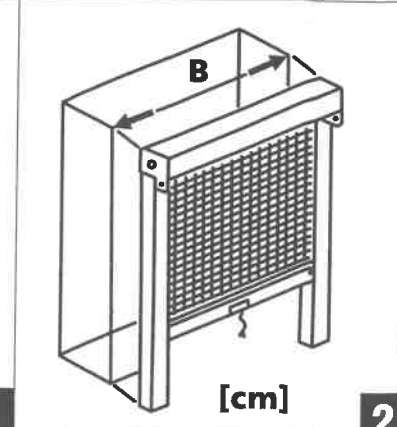


2

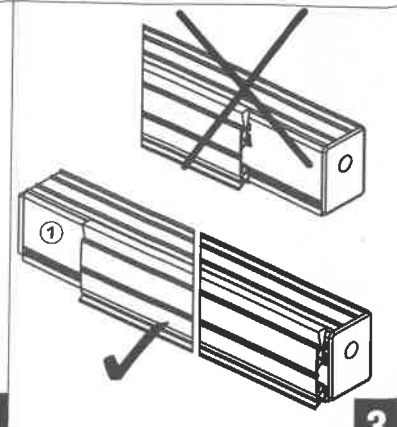


3

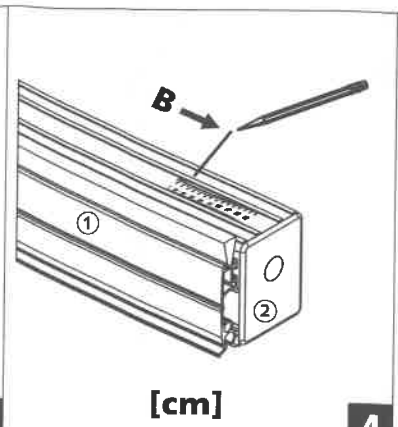


4

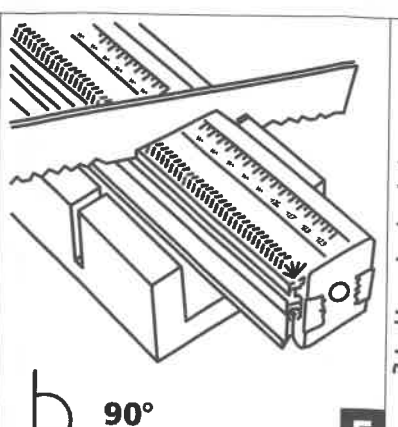


5

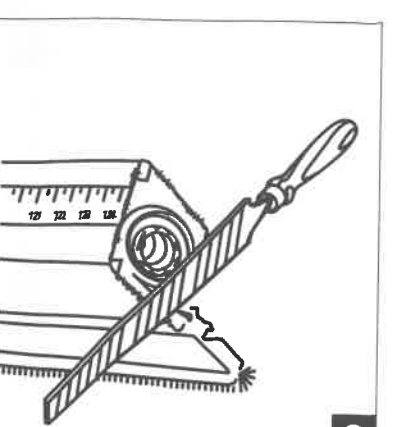


6

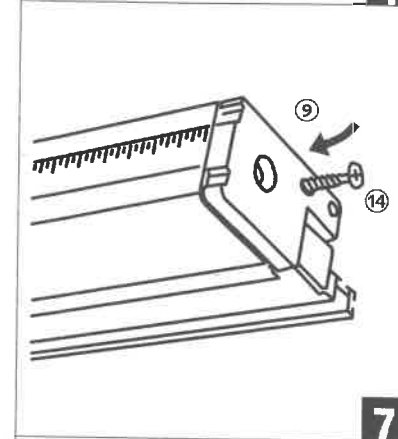


7

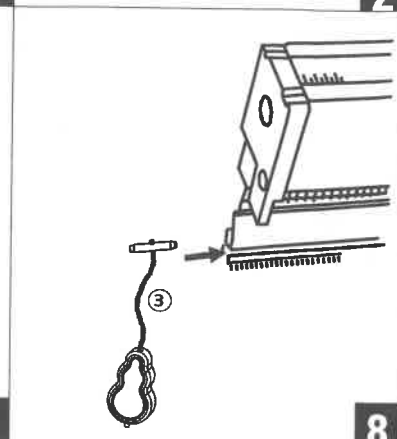


8

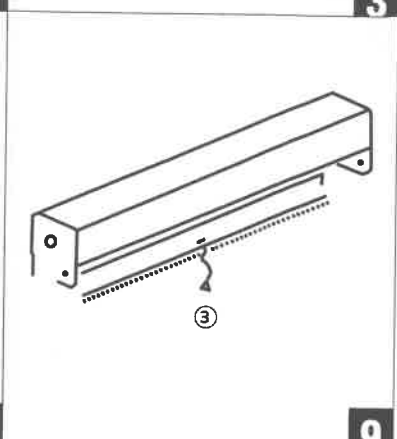


9

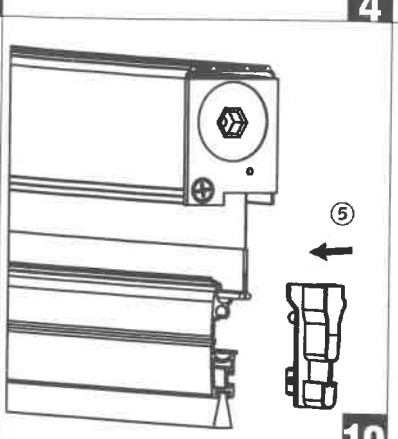


10

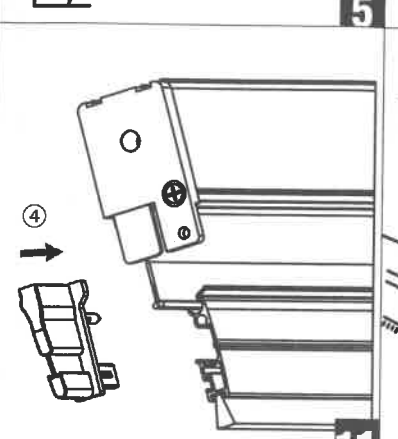


11

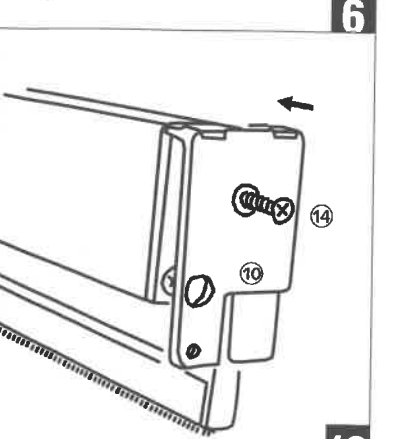


12

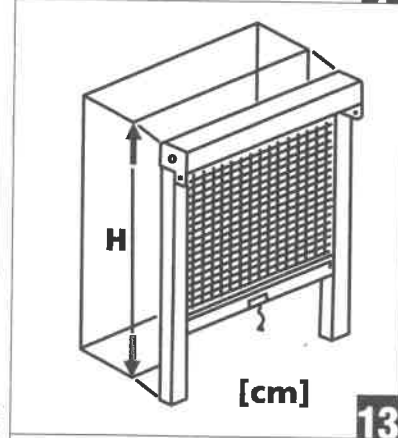


13

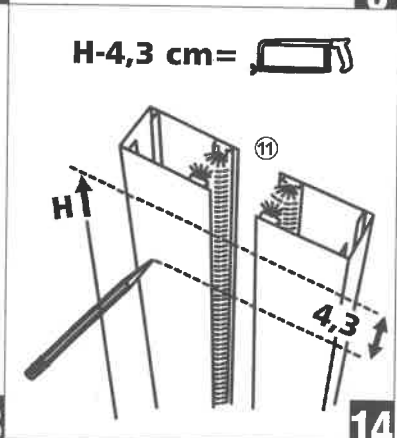


14

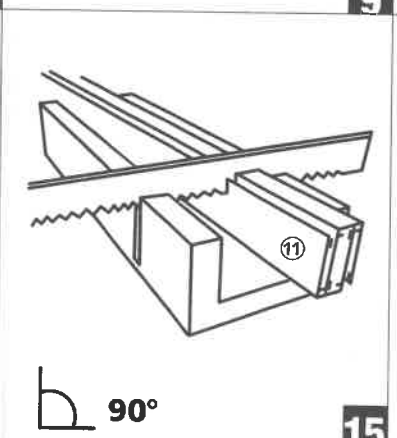


15

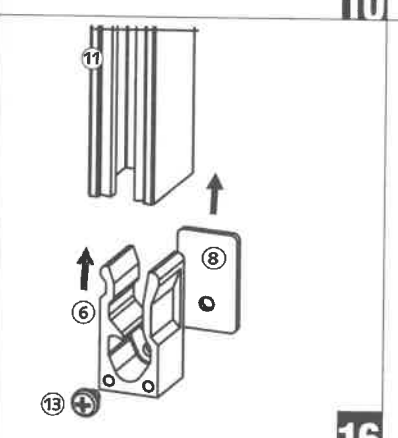


16

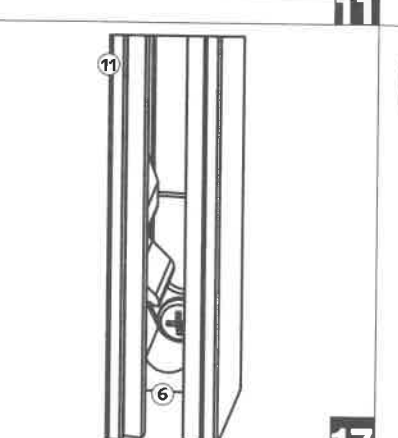


17

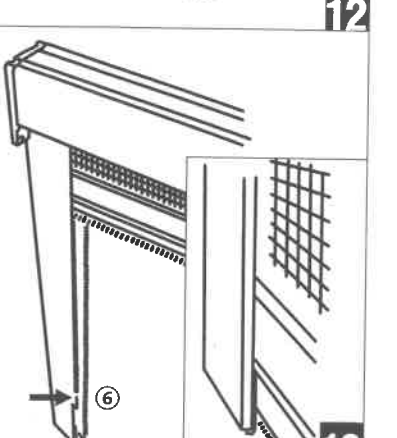


18

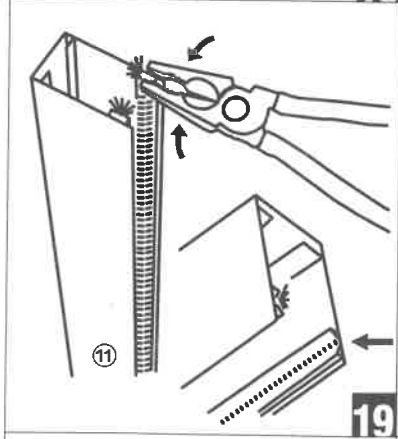


19

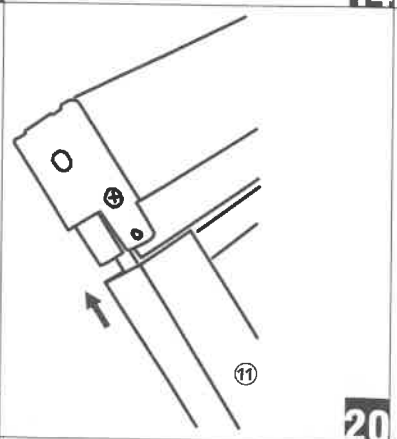


20

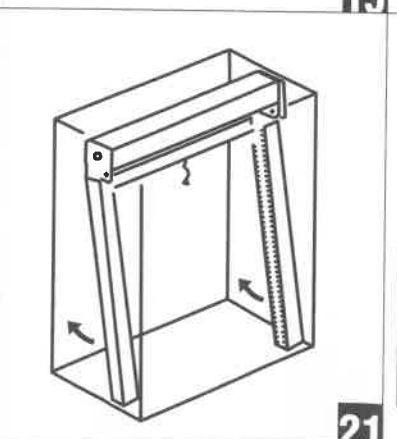


21

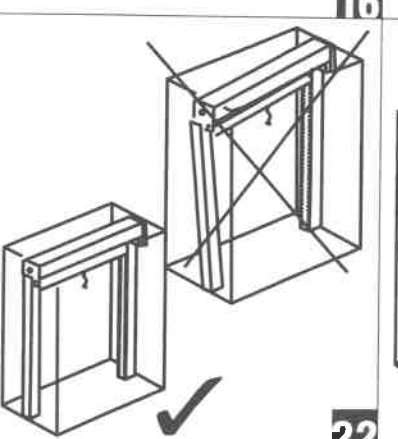


22

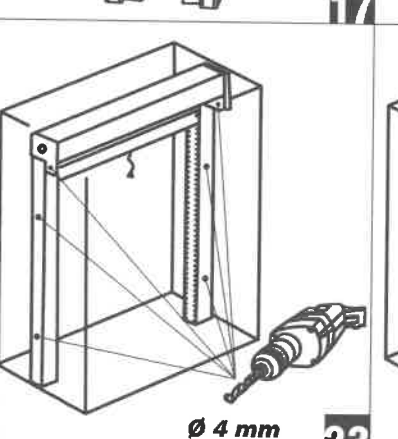


23

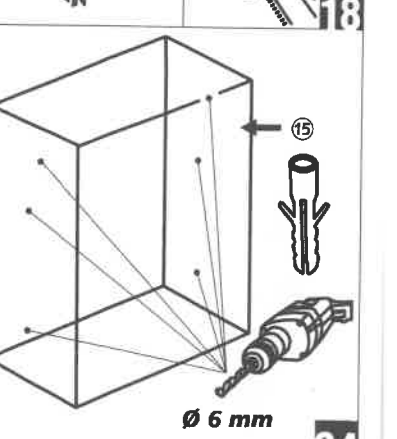


24

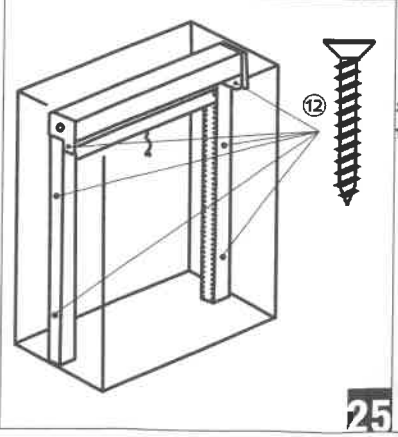


25

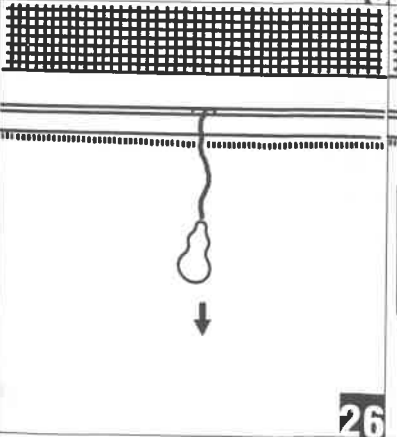


26

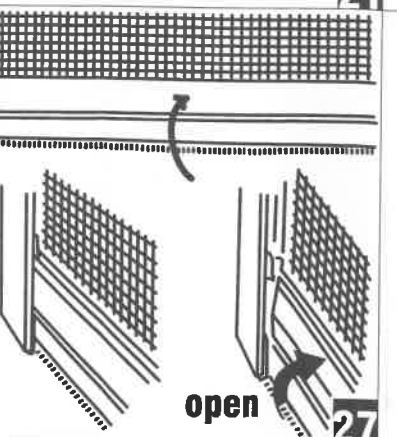


27

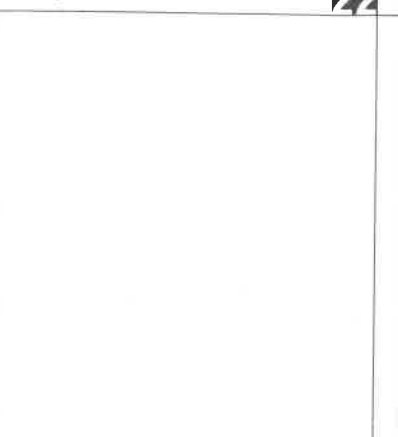


28

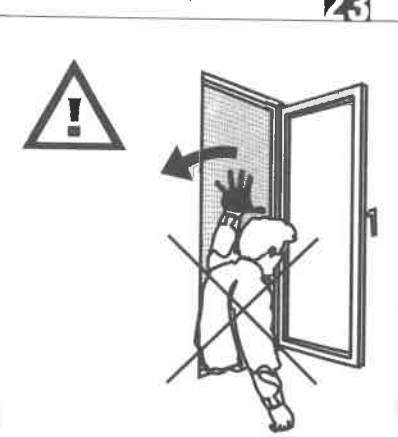

29

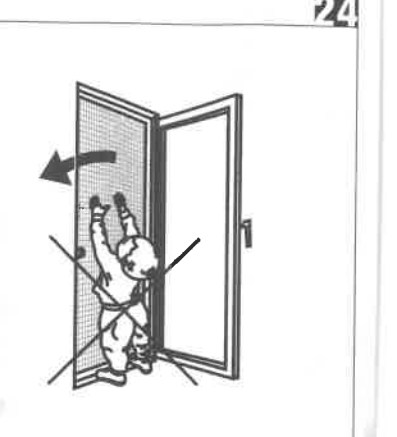

30

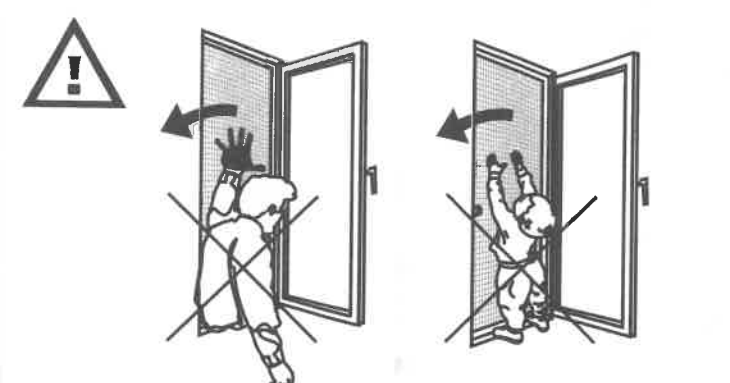

open